 



产品使用说明书

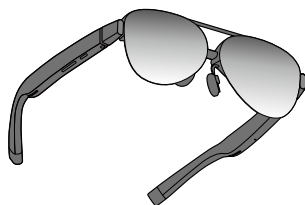

使用前请仔细阅读使用说明书，并妥善保管


1 产品介绍

 - ① 麦克风
- ② 光学模组
- ③ 鼻托
- ④ 扬声器
- ⑤ - 按钮
- ⑥ + 按钮
- ⑦ 选择键
- ⑧ TypeC 接口
- ⑨ TypeC 线缆
- ⑩ 近视调节旋钮

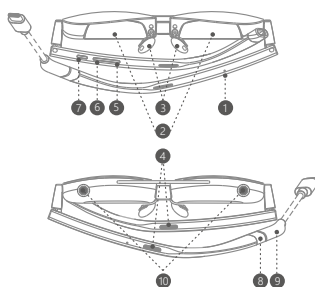

2 使用说明


眼镜通过TypeC线缆连接主机设备，主机设备(手机、平板、电脑)需支持DP输出，为眼镜供电并提供大屏效果。

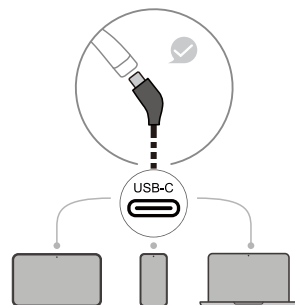

3 佩戴方法

建议镜腿完全打开后从头上往下佩戴，并将TypeC线缆置于耳后。通过鼻托调节能够调整显示画面位置，使得画面显示更完整。


- 鼻托支持上下2档滑动调节，如向上调整显示画面，通过外掰鼻托或向上滑动鼻托进行调整，如向下调整显示画面，通过向下滑动鼻托或捏紧鼻托，调整显示画面位置。
- 镜腿向外打开后再佩戴，以免夹手或头发，请勿强行弯折镜腿。

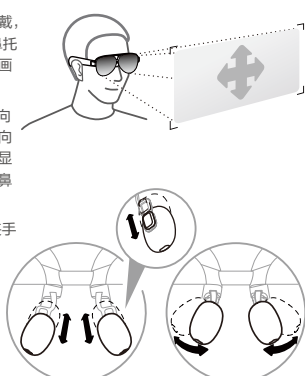

4 近视调节方式


本产品支持最高-6D的近视补偿调节功能，近视用户可以通过调节近视旋钮，实现清晰的显示效果。

- ① 将眼镜连接具有 TypeC DP输出能力的主机（手机/平板/电脑），直至屏幕显示画面；
- ② 佩戴眼镜：展开镜腿至合适的宽度，从头顶往下佩戴；
- ③ 使用单眼观看屏幕，用大拇指或食指转动对应近视调节旋钮，直到视野清晰；
- ④ 重复步骤3，将另外一只眼的视野调整清晰；
- ⑤ 如画面不能融像，出现2个画面，可以尝试用双手捂住墨镜片，再查看显示画面，能改善融像效果。

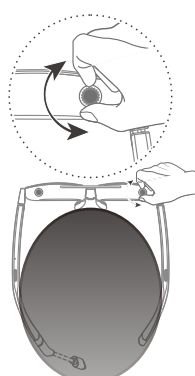

5 按键操作与熄屏模式


按键	功能说明
选择键	短按切换亮度调节和声音调节功能
+ 键	短按增加屏幕亮度或声音
- 键	短按减小屏幕亮度或声音
长按选择键	长按约5秒，恢复出厂设置
长按 -	长按约3秒，2D/3D切换
长按 +	长按约3秒，主动熄灭屏幕，此时按任意键可恢复显示

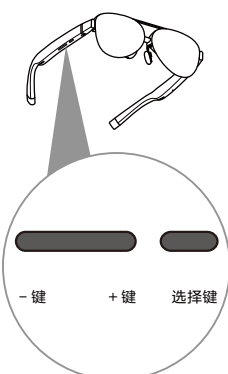

6 注意事项

- 请勿拉扯 TypeC 线缆的方式拔出插头。
- 请勿在使用或保存时挤压设备，避免因挤压导致设备坏或变形，影响设备的性能。
- 建议经常保持本产品清洁及干燥。请勿淋雨或靠近火源，请勿在多灰、潮湿、肮脏或靠近磁场的地方使用设备，以免引起设备功能异常并影响使用。
- 请勿擅自拆卸或改装设备及配件，否则该设备及配件将不在本公司保修范围之内。
- 镜片出现水雾、脏污等情况将影响使用体验，请使用眼镜布擦拭设备，以免损伤设备。请勿用力擦拭或使用含酒精等醇类清洁剂、烈性化学制品、清洗剂或强洗涤剂、表面粗糙的物品擦拭。
- 请勿用力挤压或震动本产品，请勿置于尘土过多、温度或湿度变化较大环境中。
- 请勿将本产品放于温度过高或低的环境中存储或使用。
- 请勿将本产品长时间暴露在阳光下直接照射环境中。
- 使用本产品观看影像时，可能会削弱您对外界危险警示音的感知，使用时请确认周边环境安全，请勿在行走、骑车、驾驶等需要集中注意力的场合使用眼镜。
- 部分人群在使用眼镜观看 3D 电影时可能会有头晕、呕吐、心悸等症状，如有类似情况发生，请立即停止使用本设备。


Instruction Manual

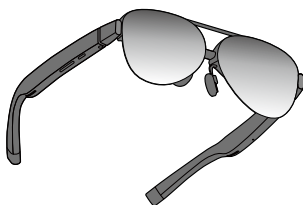

Read carefully before use and store appropriately for long-term use


1 Product introduction

- ① Mic
- ② Optical module
- ③ Nose pad
- ④ Speaker
- ⑤ - button
- ⑥ + button
- ⑦ Select button
- ⑧ TypeC interface
- ⑨ TypeC cable
- ⑩ Myopia Adjustment Knob

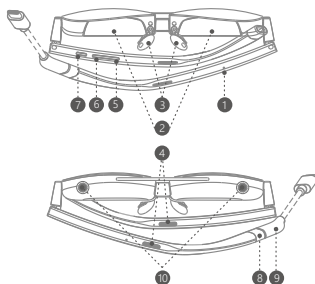

2 Instructions for use


The glasses connect to the host device (e.g., smartphone, tablet, computer) via Type-C cable. The host device must support DP (DisplayPort) output to power the glasses and deliver a large-screen viewing experience.

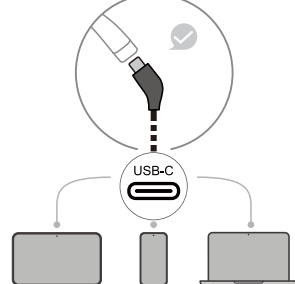

3 Wearing method

It is recommended to fully open the temple and wear it from top of head, with the TypeC cable placed behind the ear. By adjusting the nose pad, the position of the display screen can be adjusted to make the screen display more complete.


- The nose pad supports two-position sliding adjustment. To raise the display screen, adjust by spreading the nose pads outward or sliding them upward. To lower the display screen, slide the nose pads downward or pinch them together to reposition the display.
- Wear the temple after opening it outward to avoid pinching your hands or hair. Please do not bend it forcibly fold the temple.

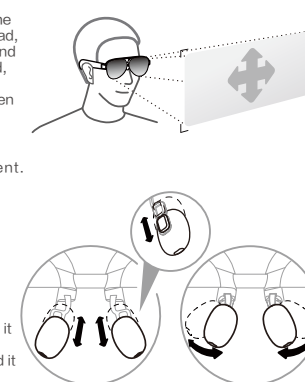

4 Myopia-lens installation


This product supports myopia compensation adjustment up to -6D. Users can achieve a clear display by adjusting the diopter knob.

1. Connect the glasses to a host device (phone/tablet/computer) with Type-C DP output capability until the screen displays an image.
2. Wear the glasses: Extend the temples to a comfortable width and put them on from the top of your head.
3. Adjust one eye at a time: Cover one eye and use your thumb or index finger to rotate the diopter adjustment knob until the image becomes clear.
4. Repeat Step 3 to adjust the other eye for clear vision.
5. If the image does not fuse (double vision appears): Try covering the lenses with both hands briefly, then check the display again—this may improve image fusion.

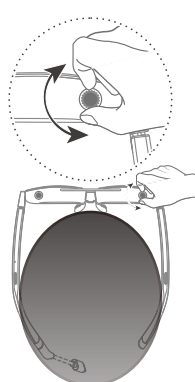

5 Key operation and sleep

Button	Function Description
Select button	Short press to switch brightness adjustment and sound adjustment functions.
+ button	Short press to increase screen brightness or sound.
- button	Short press to reduce screen brightness or sound.
Long press Select button	Restore factory settings.
Long press -	Long press for about 3 seconds to switch between 2D/3D.
Long press +	Actively turn off the screen, short press any button to restore display after turning off the screen.

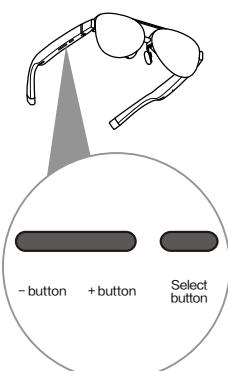

6 Precautions

- Do not unplug by pulling the TypeC cable.
- Do not squeeze the equipment during use or storage to avoid causing the equipment to be squeezed.
- Regularly keep the device clean and dry. Do not expose to rain, fire, or strong magnetic fields. Avoid use in dusty, humid, dirty, or high-static environments to prevent malfunctions.
- Do not disassemble or modify the device or accessories without authorization. Unauthorized tampering will void the manufacturer's warranty.
- The occurrence of water mist, dirt and other conditions on the lens will affect the user experience. Please use the eyeglass cloth that comes with the box to wipe the equipment to avoid damaging it. Do not use alcohol or other alcohol based cleaning agents, strong chemicals, cleaning agents or strong detergents, or rough surfaces to wipe with force.
- Do not squeeze or shake this product forcefully. Avoid placing it in environments with excessive dust, rapid temperature changes, or high humidity fluctuations.
- Do not place this product in an environment where the temperature is too high or too low.
- Do not expose this product to direct sunlight for long periods of time.
- When using this product to view images, your awareness of ambient warning sounds (e.g., alarms, traffic) may be reduced. Always ensure a safe environment before use. Do not use while walking, cycling, driving, or in any situation requiring full attention.
- Some users may experience dizziness, nausea, rapid heartbeat, or similar symptoms when watching 3D content with these glasses. If these symptoms occur, Stop using the device immediately and rest in a well-ventilated area.